

CONVERTING SPRINKLERS TO DRIP: uses ~80% less water



1

Locate a sprinkler head that is in the center of the shrub bed.



2

Unscrew and remove the body of the sprinkler.




3

Install a Rainbird Retro 1800 body, Marlex Street Elbow & Compression Tee for drip connection.




4

Connect the drip tubing.

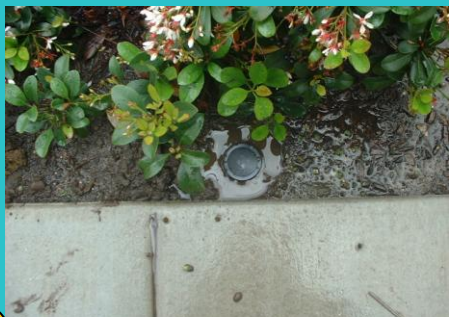

5

Cap all other sprinkler heads that are on the same valve.

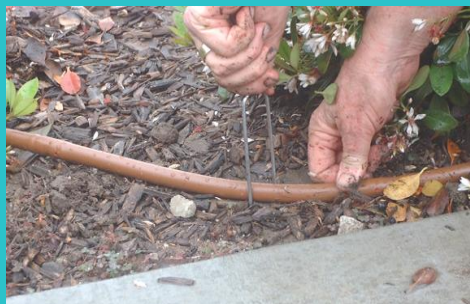

6

Loop tubing around 60% of the plant's root ball and stake down the tubing every 3 feet.



7

Flush system and close the end of the drip tubing.



8

Change valve to a low flow valve and reset your irrigation controller.