


POSTING REQUIREMENTS FOR TEMPORARY NO PARKING (TNP) SIGNS

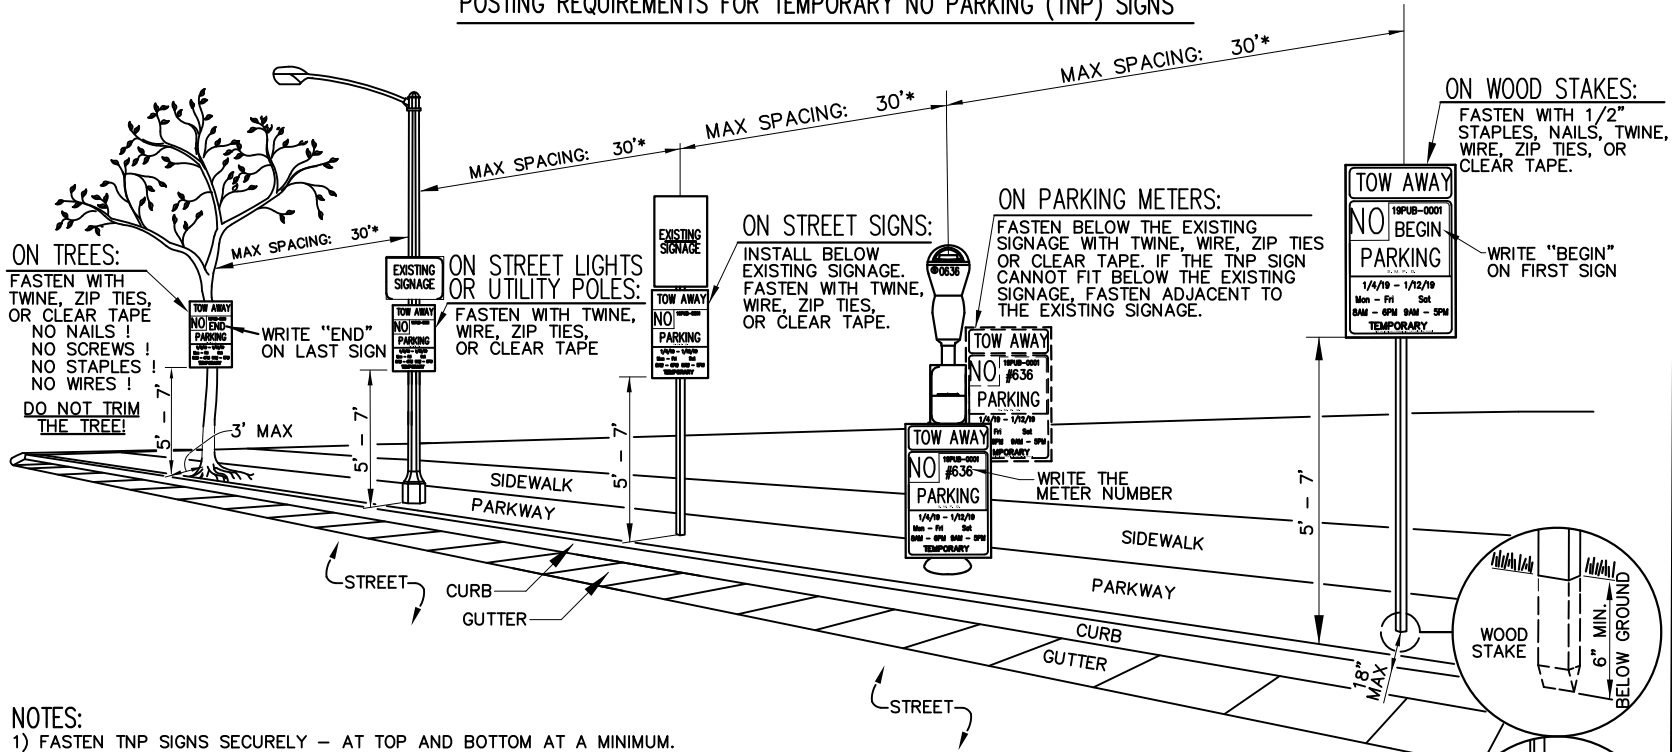

- NOTES:**
- 1) FASTEN TNP SIGNS SECURELY – AT TOP AND BOTTOM AT A MINIMUM.
 - 2) DO NOT COVER ANY EXISTING SIGNAGE.
 - 3) INSTALL TNP SIGNS FACING ONCOMING TRAFFIC AND AT A 90 DEGREE ANGLE TO THE STREET (LIKE A STOP SIGN).
 - 4) TNP SIGNS MUST BE UNOBSTRUCTED AND CLEARLY VISIBLE FROM THE STREET.
 - 5) DO NOT POST TNP SIGNS ON TREES IF 5'-0" MINIMUM TO THE BOTTOM OF THE SIGN CANNOT BE OBTAINED.
- *IF TNP SIGNS ARE BEING POSTED ON THE ENTIRE BLOCK, MAXIMUM SPACING BETWEEN TNP SIGNS IS 50 FEET AND A TNP SIGN MUST BE POSTED ON ALL EXISTING POLES WHERE PERMANENT PARKING SIGNS ARE INSTALLED

SIGN ISSUED BY CIVIL ENGINEERING & TRANSPORTATION MANAGEMENT

TOW AWAY	
NO	19PUB-0001 #636 BEGIN
PARKING	
S. M. P. D.	
1/4/19 - 1/12/19	
Mon - Fri	Sat
8AM-6PM	9AM-5PM
TEMPORARY	

PERMIT NUMBER
FOR SIGNS ON METERS, WRITE METER NUMBER HERE.
FOR SIGNS ON NON-METERS, WRITE "BEGIN" OR "END" HERE.

SIGN ISSUED BY CIVIL ENGINEERING

TOW AWAY	
NO	PARKING
S. M. P. D.	
PERMIT NO. 6368	
DATE 1/4/19 TO 1/12/19	
TIME	Mon-Fri "END"
	8AM-6PM
PROJECT SIDEWALK & DRIVEWAY REPLACEMENT	
CONTACT Civil Eng. @ 310 458-8721	
TEMPORARY	

FOR SIGNS ON NON-METERS, WRITE "BEGIN OR END" HERE.
FOR SIGNS ON METERS, WRITE METER NUMBER HERE.

IN AREAS WHERE A WOODEN STAKE IS UNABLE TO BE SECURED TO THE GROUND (E.G. A CONCRETE PARKWAY), USE A 5-GALLON BUCKET FILLED HALFWAY WITH GRAVEL, CEMENT, OR SAND.

Santa Monica City of
Department of Public Works
1437 4th Street, Suite 300 Santa Monica, CA 90401
TEL. (310) 458-8721 FAX. (310) 393-4425
e-mail : smengineering@smgov.net

REQUIREMENTS FOR TEMPORARY NO PARKING SIGNS

DRAWING NO.	SM19	DATE	July 16, 2019
SUBMITTED BY:	<i>Johnnie Calvo</i>	DATE	July 16, 2019
APPROVED BY:	<i>Zach Pollard</i>		
	ZACH POLLARD, P.E. - ACTING CITY ENGINEER		
	1 of 1		